


ELECTRIC HEIGHT ADJUSTABLE DESK

UPLIFT DESK

UPLIFT 971 Height Adjustable Desk

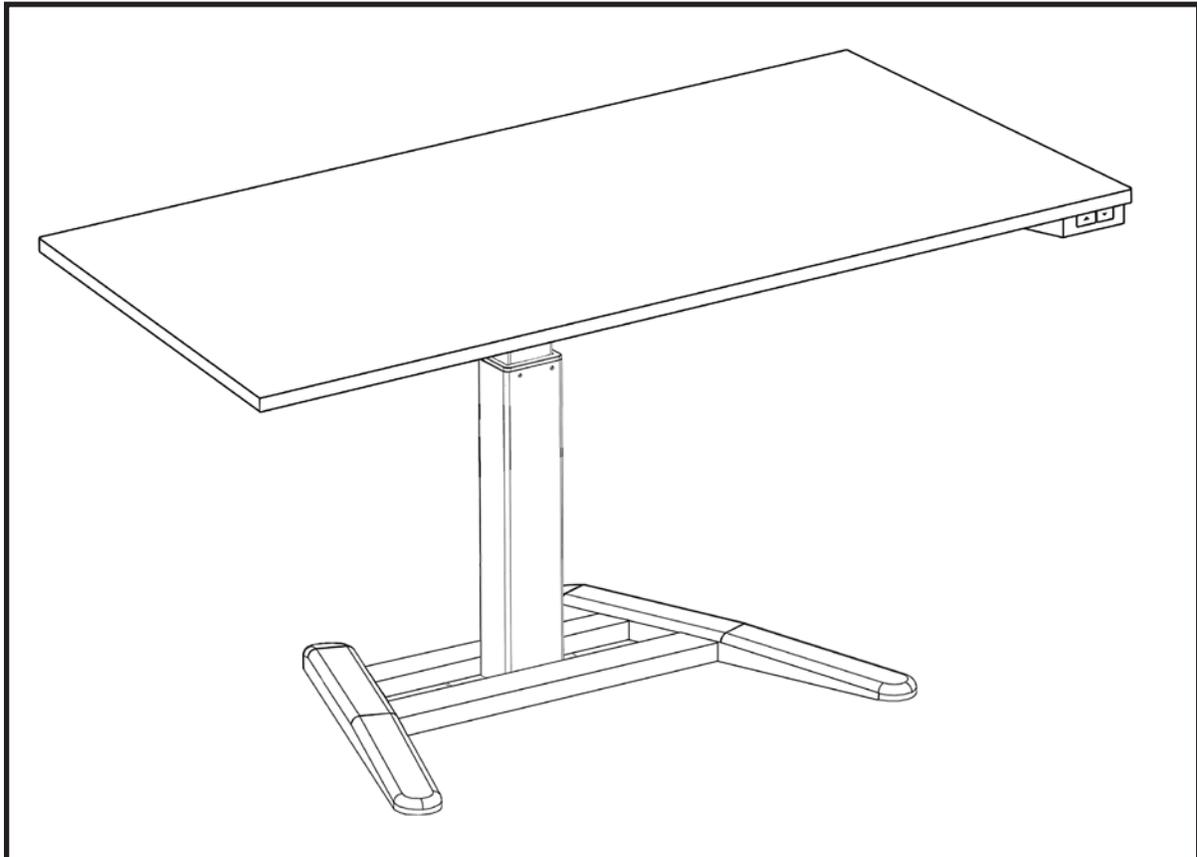

DIRECTIONS FOR ASSEMBLY AND USE



CAUTION

MAKE SURE NO OBSTACLES ARE IN THE DESK'S PATH AND ALL CORDS ARE OF APPROPRIATE LENGTH FOR DESK TRAVEL. FAILURE TO COMPLY WITH OR OBSERVE ALL ASSEMBLY, SAFETY, AND OPERATION INSTRUCTIONS AND WARNINGS REGARDING THE USE OF THIS PRODUCT MAY RESULT IN SERIOUS PROPERTY DAMAGE OR BODILY INJURY.

IMPORTANT:

Any user or installer of desk base must study this manual carefully.
If this desk is sold, please provide the manual to the buyer.

TABLE OF CONTENTS	PAGE
1. SAFETY AND WARNINGS	2
2. USAGE	2
3. SETUP AND INSTALLATION	2
4. PARTS LIST	3
5. ASSEMBLY INSTRUCTIONS	4
6. TECHNICAL SPECIFICATIONS	6
7. TROUBLESHOOTING GUIDE	6

1. SAFETY AND WARNINGS

- Inappropriate use of this product may cause property or bodily injury.
- Check surroundings on all sides before using the desk. Body parts and property can be crushed if trapped between an immobile obstacle and the desk's range of motion.
- Ensure the length of power cords are accounted for when operating the desk. Monitors, computers, speakers, anything with a cord that is not long enough for the desk's range of motion could be pulled down or have its wires broken. Items pulled off the desk may cause other items to fall.
- Please provide this operation to any users, installers, or support personnel operating the product.

2. USAGE

This height adjustable desk has an electric motor and is designed for use in dry work areas only. The desk height is adjustable so that it can be positioned at the most ergonomically suitable height. These desks are designed only for the purposes included in this manual. They should not be used in environments with high humidity or dampness. Any other use is at user's risk.

Do not move around, crawl or lie under the desk frame. Do not sit or stand on the desk frame.

Children should never use the desk unless they are supervised by adults.

Liability: Under no circumstances does the manufacturer accept warranty claims or liability claims for damages caused from improper use or handling of the desk frame other than that which is described in this operation manual.

3. SETUP AND INSTALLATION

Once the desk has been assembled, adjust the feet so that the desk is level and does not shift its position. After this, connect the desk to the 110v outlet and the desk is ready for use.




Check that no cables can get jammed.

Choose a placement for the desk that's a safe distance from window frames, radiators, furniture etc. so that people do not get stuck or trapped by the desk.


Do not place any objects that are taller than 20" underneath the desk.

After it has been assembled, when moving the desk, DO NOT lift the desk by the desktop. Lifting this way can stress the fasteners connecting the desk base to the desktop. Lower the desk completely and lift the desk by grabbing the top of the desk base or by removing the desktop first.

4. PARTS LIST

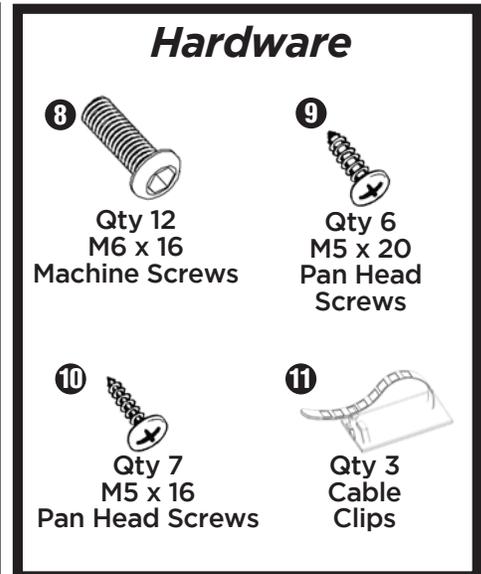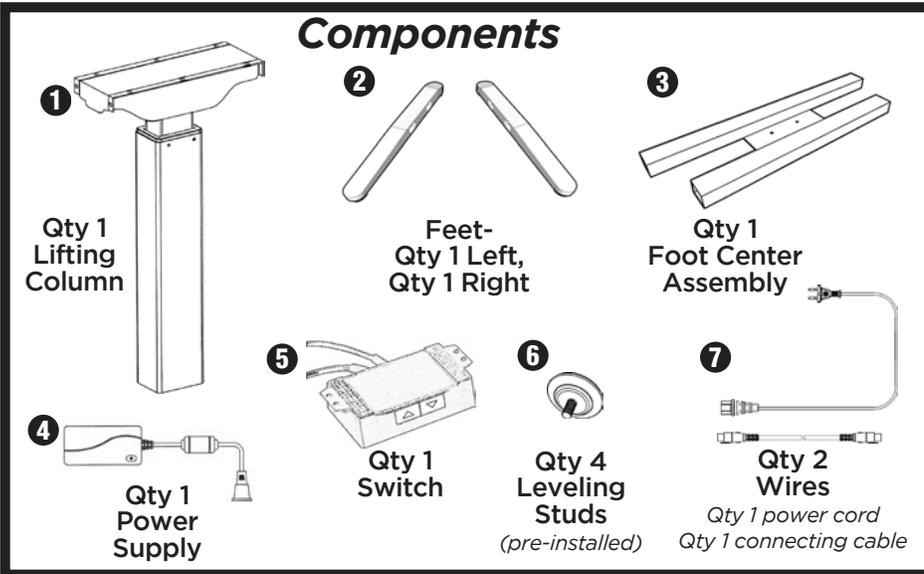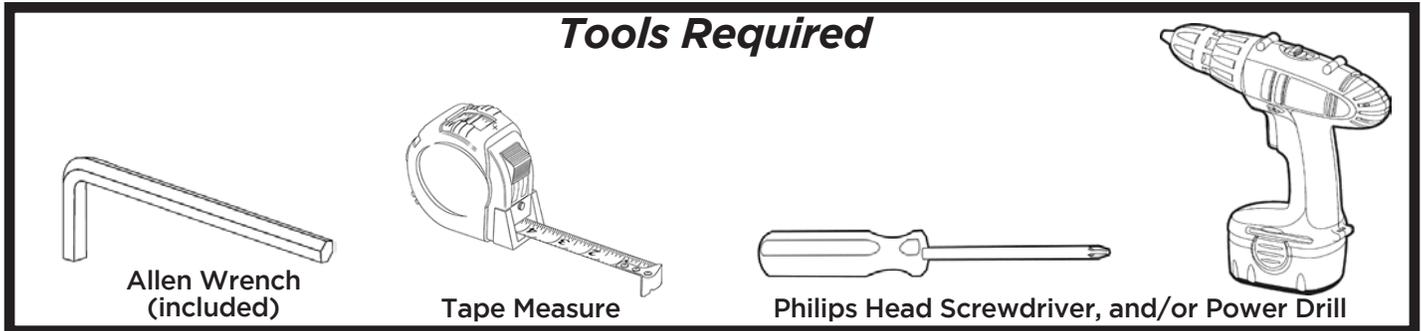

Please count all pieces before disposing of any carton or packing material. Use a padded or carpeted area for assembly to avoid damage. For ease and safety, we recommend two people for assembly.

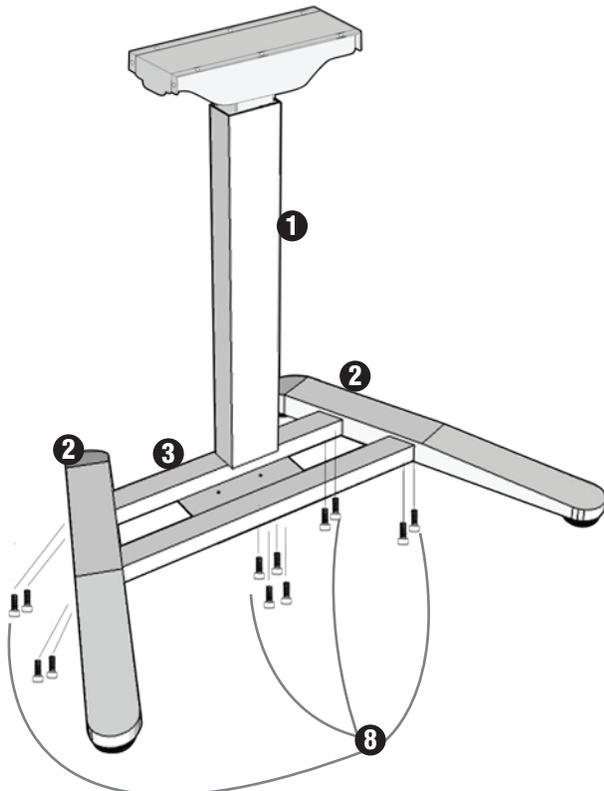


Part #	Description	Qty
1	Lifting Column	1
2	Feet (right & left)	2
3	Foot Center Assembly	1
4	Power Supply	1
5	Switch	1
6	Leveling Studs	4
7	Wires (Power & Connector wires)	2
8	M6 x 16 Machine Screws	12
9	M5 x 20 Pan Head Screws	6
10	M5 x 16 Pan Head Screws	7
11	Cable Clips	3

5. ASSEMBLY INSTRUCTIONS

A. First, lay out all components and hardware to ensure that you have all the parts listed on the components list.


Assemble the base foot by sliding the left and right feet (Part #2) onto the Foot Center Assembly (Part #3).

Using four (4) M6x16 Machine Screws (Part #8) attach both feet to the Foot Center Assembly (Part #3).

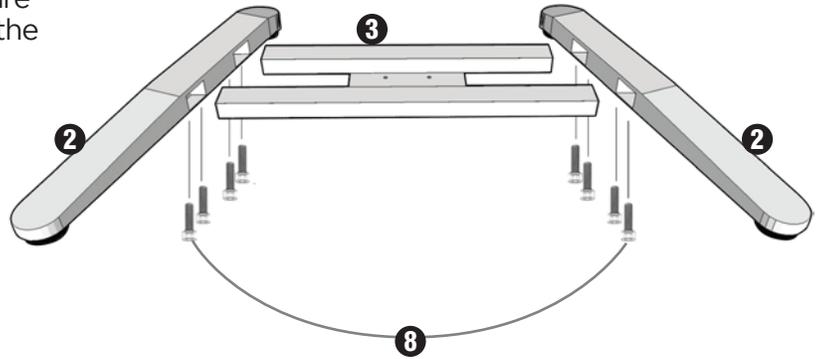

B. Turn the Lifing column (Part #1) upside down and place the assembled base foot so the holes line up.


Secure in place with four (4) M6 x 16 Machine Screws (Part #8)

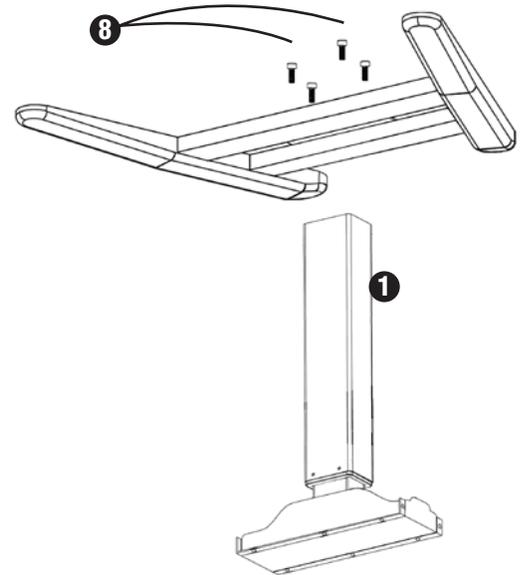


C. **Note:** If you have ordered the UPLIFT 975, please see the enclosed addendum, then proceed to Step D.

Your desktop may or may not be pre-drilled. Please check both sides of the desktop before placing the desk base on it for pre-drilling!


Place the desktop atop the base and secure with six (6) M5 x 20 Pan Head Wood Screws (Part #9). Double-check that the included wood screws are not too long for your desktop and won't puncture the surface when screwed all the way in.

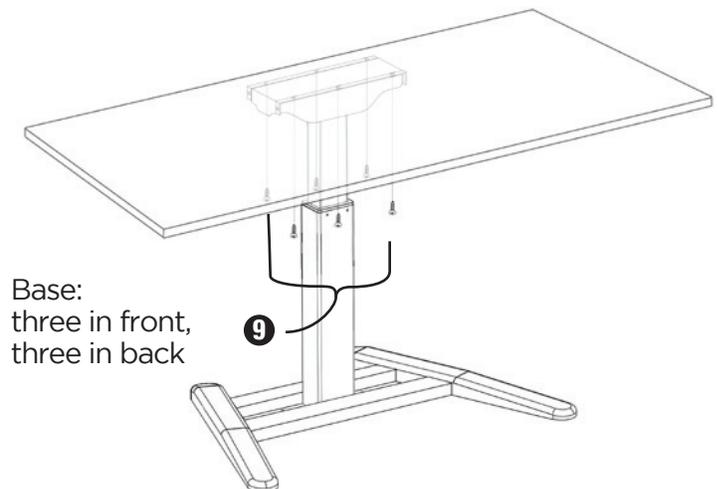


- D. Adjust the Leveling Studs (Part #6) on the feet as needed.

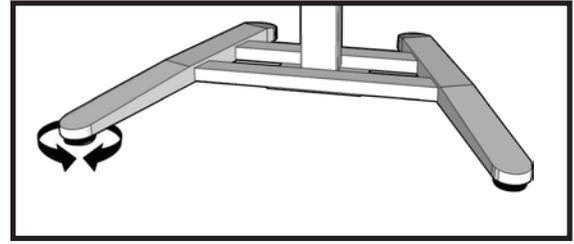

- E. Connect the Switch (Part #5) to the Power Supply (Part #4) with the Connecting Wire (Part #7).
Connect the Power Cord to the Power Supply (Part #4).

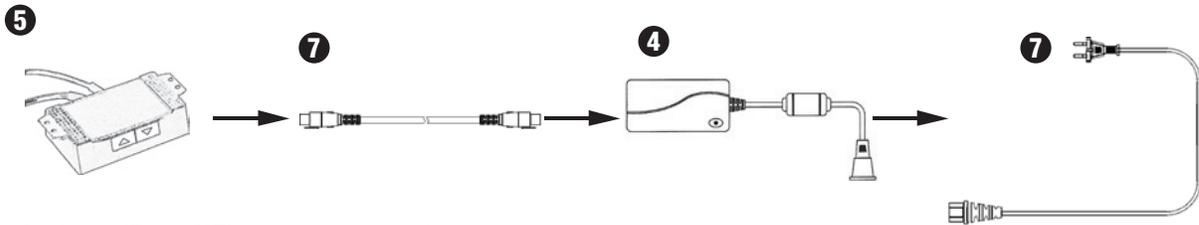

Attach the Switch (Part #5) to the underside of the desktop with two (4) M5x16 Pan Head Screws (Part #10).

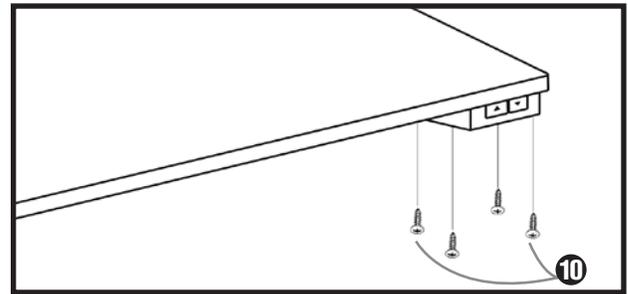


Use the adhesive-backed Cable Clips (Part #11) to secure the Connecting Wires, so they don't sag.

- F. Plug the Power Cord into a 110v outlet.

IMPORTANT! You must RESET the desk prior to use:

- 1- Press and hold the down button for 20 seconds, the desk will lower all the way, slightly rise, and then stop moving to signal the end of the reset.
- 2- Release the DOWN button.

Your desk is now ready to use!

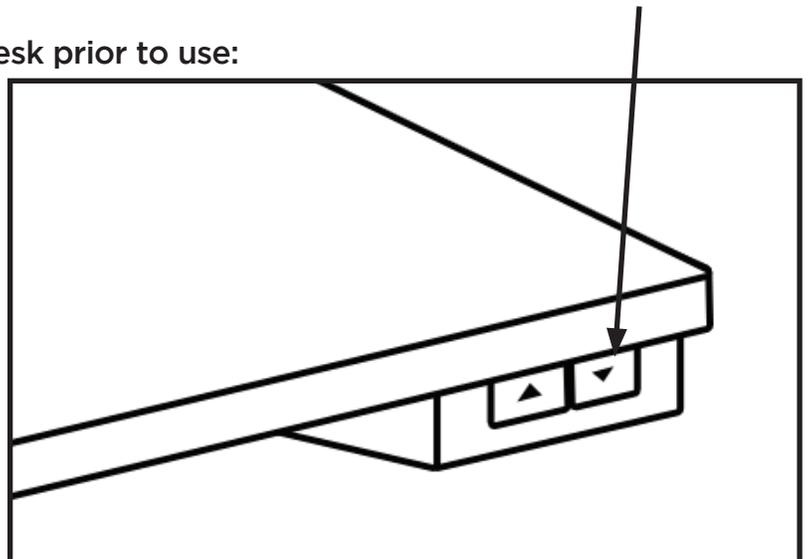



CAUTION:

- MAKE SURE ALL CORDS ARE APPROPRIATE LENGTH FOR DESK TRAVEL.
- ALSO ENSURE THAT NO OBSTACLES ARE IN THE DESK'S PATH AND THE DESKTOP IS NOT TOUCHING ANY WALLS.

6. TECHNICAL SPECIFICATIONS

Height Range	26.6" - 44.7"
Travel Speed	0.8" per second (varies, slowest w/ maximum load)
Weight Capacity	165 lbs.
Duty Cycle	10%, Max. 2 mins on, 18 mins off
	Soft Start/Stop Adjustable leveling studs

7. TROUBLESHOOTING

-- Reset Instructions --

If experiencing problems when trying to raise or lower the desk:

- Unplug the power cord and hold the down key for 20 seconds.
- Plug the power cord back in.
- Press and hold the down button for 20 seconds, the desk will lower all the way, slightly rise, and then stop moving to signal the end of the reset. Release the down button.
- You may need to do this if the desktop is ever unplugged or loses power.

If the desk seems to be uneven, you may need to adjust the leveling studs at the bottom of the base.



In the event of a power outage or if the power cord is unplugged, a manual reset may be necessary (see Reset Instructions above)



This product is designed with a duty cycle of 10% (2 min. on, 18 min. off)



Keep Children away from electric height-adjustable desks, control units and handsets. There is a risk of injury and electric shock



Do not open any of the components: lifting columns, control box, or handset. There is a danger of electric shock



Keep all electrical components away from liquids

